




Grapadora neumática simG90 | Pneumatic stapler simG90

Explosionado - Exploded view

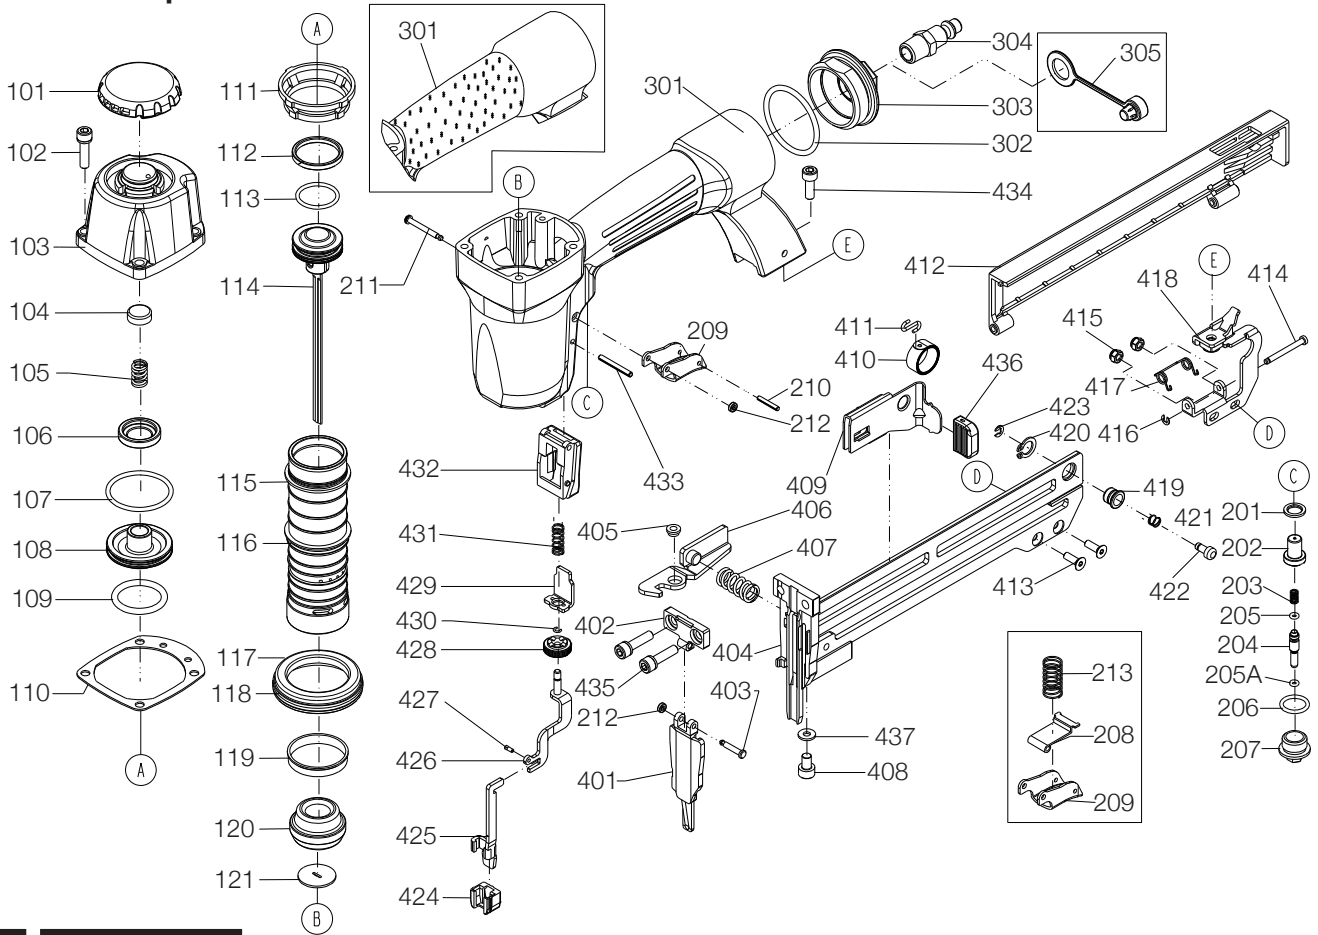

simG90

1205140

Despiece - Spare part list

COD.	Nº	DESC.
4450101	101	DEFLECTOR
9725101	102	BOLT ASSY
4450103	103	CAP
9725104	104	SEAL
9725105	105	COMPRESSION SPRING
4450106	106	OIL SEAL
4450107	107	O - RING
4450108	108	HD.VALVE PISTON
4450109	109	O - RING
4450110	110	PACKING
4450111	111	COLLAR
4450112	112	PISTON RING
9040113	113	O - RING
9040114	114	DRIVER UNIT
4450115	115	CYLINDER
9725108	116	O - RING
4450117	117	CYLINDER SPACER
4450118	118	O - RING
4450119	119	CYLINDER RING
9040120	120	BUMPER
9040121	121	DRIVER GUIDE
4450201	201	SEAL
4450202	202	TRIGGER VALVE HEAD
9725203	203	SPRING
9725204	204	PLUNGER
7150209	205	O - RING

COD.	Nº	DESC.
9725205A	205A	O - RING
9040206	206	O - RING
4450207	207	PLUNGER CAP
9040218	208	SECONDARY TRIGGER
9040219	209	TRIGGER
9920402	210	SPRING PIN
2264215	211	TRIGGER PIVOT PIN
2264216	212	RETAINER
4450208	213	SPRING
9040301	301	GUN BODY UNIT
1250303	302	O - RING
9040303	303	END CAP
130305	304	AIR PLUG
130304	305	DUSTY COVER
9040401	401	DRIVER GUIDE COVER A
9040402	402	DRIVER GUIDE COVER B
9040403	403	FIXED PIN
9040404	404	DRIVER GUIDE UNIT
9040405	405	MAGAZINE SPACER
9040406	406	LATCH
9040407	407	LOCK SPRING
7116410	408	HEX. SOC. HD. BOLT
9040409	409	PUSHER
4450412	410	SPRING
4450413	411	SPRING RETAINER
9040412	412	MOUNTING BRACKET

COD.	Nº	DESC.
9040413	413	COUNTER SUNK SCREW
9040414	414	LATCH PIN
645310	415	LOCK NUT
9725418	416	E - RING
9040417	417	SPRING
9040418	418	BRACKET
9040419	419	DOOR LATCH COVER
4450422	420	SNAP RING
6774431	421	LATCH SPRING
9040422	422	DOOR LATCH
9920429	423	E - RING
9040424	424	PROTECTIVE CASING
9040425	425	SAFETY A
9040426	426	SAFETY B
9040427	427	PIN
15364436	428	ADJUST AXIE
4450430	429	SAFETY
18350429	430	RING
15364433	431	SAFETY SPRING
9040432	432	SAFETY GUIDE
9040433	433	SPRING PIN
15364419	434	HEX. SOC. HD. BOLT
9725427	435	BOLT ASSY
4450426	436	PUSHER CUSHION
9040437	437	FLAT WASHER