


Grapadora neumática simG4450 | Pneumatic stapler simG4450

Explosionado - Exploded view

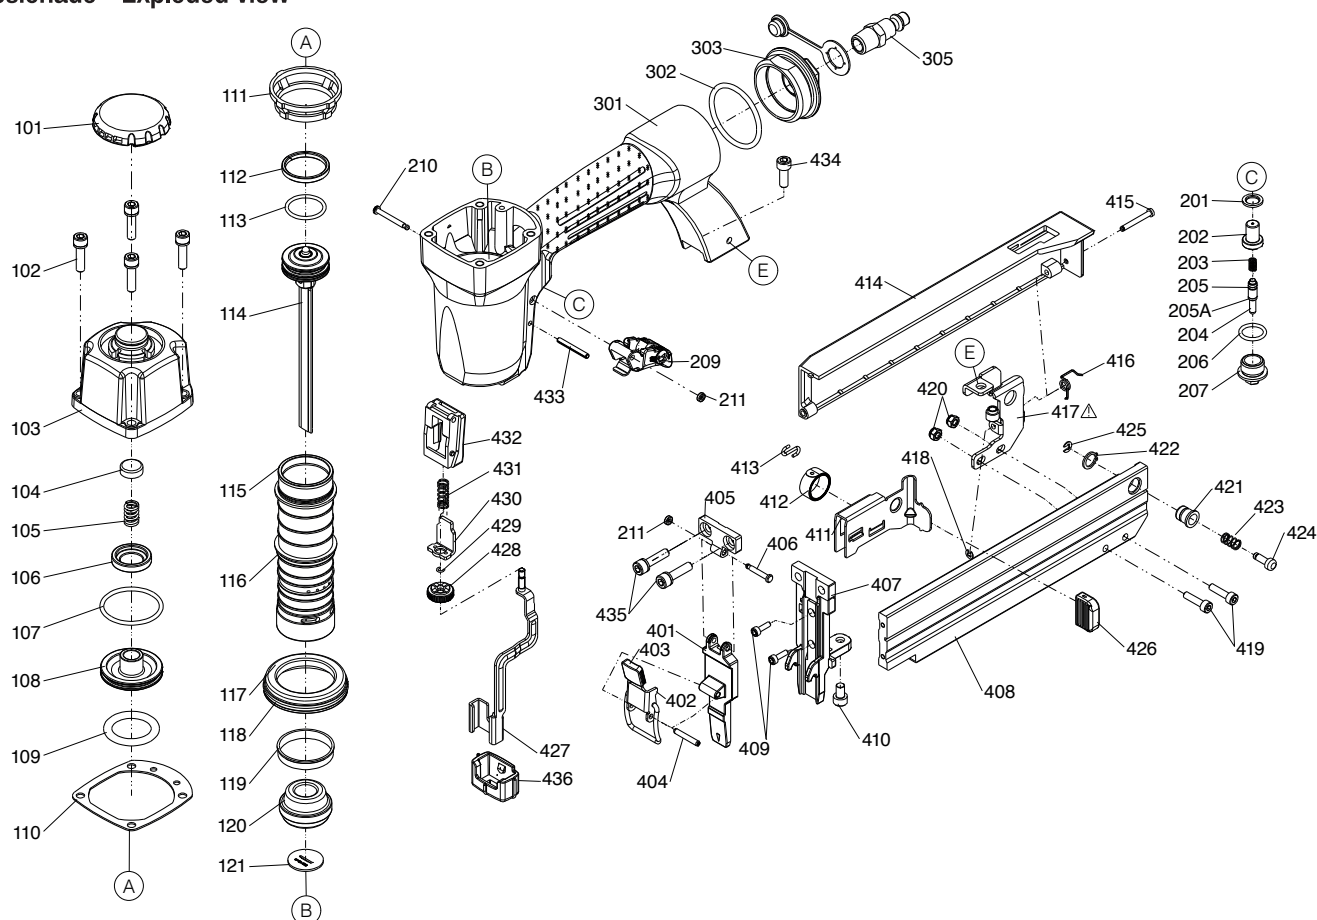

simG4450

1205150

Despiece - Spare part list

REF.	Nº.	DESC.
4450101	101	DEFLECTOR
9725101	102	BOLT ASSY
4450103	103	CAP
9725104	104	SEAL
9725105	105	COMPRESSION SPRING
4450106	106	OIL SEAL
4450107	107	O - RING
4450108	108	HD. VALVE PISTON
4450109	109	O - RING
4450110	110	PACKING
4450111	111	COLLAR
4450112	112	PISTON RING
9040113	113	O - RING
4450114	114	DRIVER UNIT
4450115	115	CYLINDER
9725108	116	O - RING
4450117	117	CYLINDER SPACER
4450118	118	O - RING
4450119	119	CYLINDER RING
4450120	120	BUMPER
4450121	121	DRIVER GUIDE
4450201	201	SEAL
4450202	202	TRIGGER VALVE HEAD
9725203	203	SPRING
9725204	204	PLUNGER

REF.	Nº.	DESC.
7150209	205	O - RING
9725205A	205A	O - RING
9040206	206	O - RING
4450207	207	PLUNGER CAP
4450219	209	TRIGGER UNIT
2264215	210	TRIGGER PIVOT PIN
2264216	211	RETAINER
4450301	301	GUN BODY UNIT
1250303	302	O - RING
4450303	303	END CAP
130305	305	AIR PLUG
4450401	401	DRIVER GUIDE COVER A
4450402	402	LOCK HANDLE UNIT
15364437	403	PUSHER CUSHION
7190212	404	SPIRAL PINS
4450405	405	DRIVER GUIDE COVER B
4450406	406	FIXED PIN
4450407	407	DRIVER GUIDE
4450408	408	MIDDLE STRIP
645407	409	HEX. SOC. HD. BOLT
4450410	410	HEX. SOC. HD. BOLT
4450411	411	PUSHER
4450412	412	SPRING
4450413	413	SPRING RETAINER

REF.	Nº.	DESC.
4450414	414	MOUNTING BRACKET
4450415	415	LATCH PIN
4450416	416	SPRING
4450417	417	BRACKET UNIT
9725418	418	E - RING
4450419	419	HEX. SOC. HD. BOLT
645310	420	LOCK NUT
4450421	421	DOOR LATCH COVER
4450422	422	SNAP RING
4450423	423	LATCH SPRING
4450424	424	DOOR LATCH
9920429	425	E - RING
4450426	426	PUSHER CUSHION
4450427	427	SAFETY A UNIT
15364436	428	ADJUST AXIE
18350429	429	RING
4450431	430	SAFETY
7150434	431	SAFETY SPRING
9040432	432	SAFETY GUIDE
9040433	433	SPRING PIN
15364419	434	HEX. SOC. HD. BOLT
9725427	435	BOLT ASSY
4450436	436	PROTECTIVE CASING