


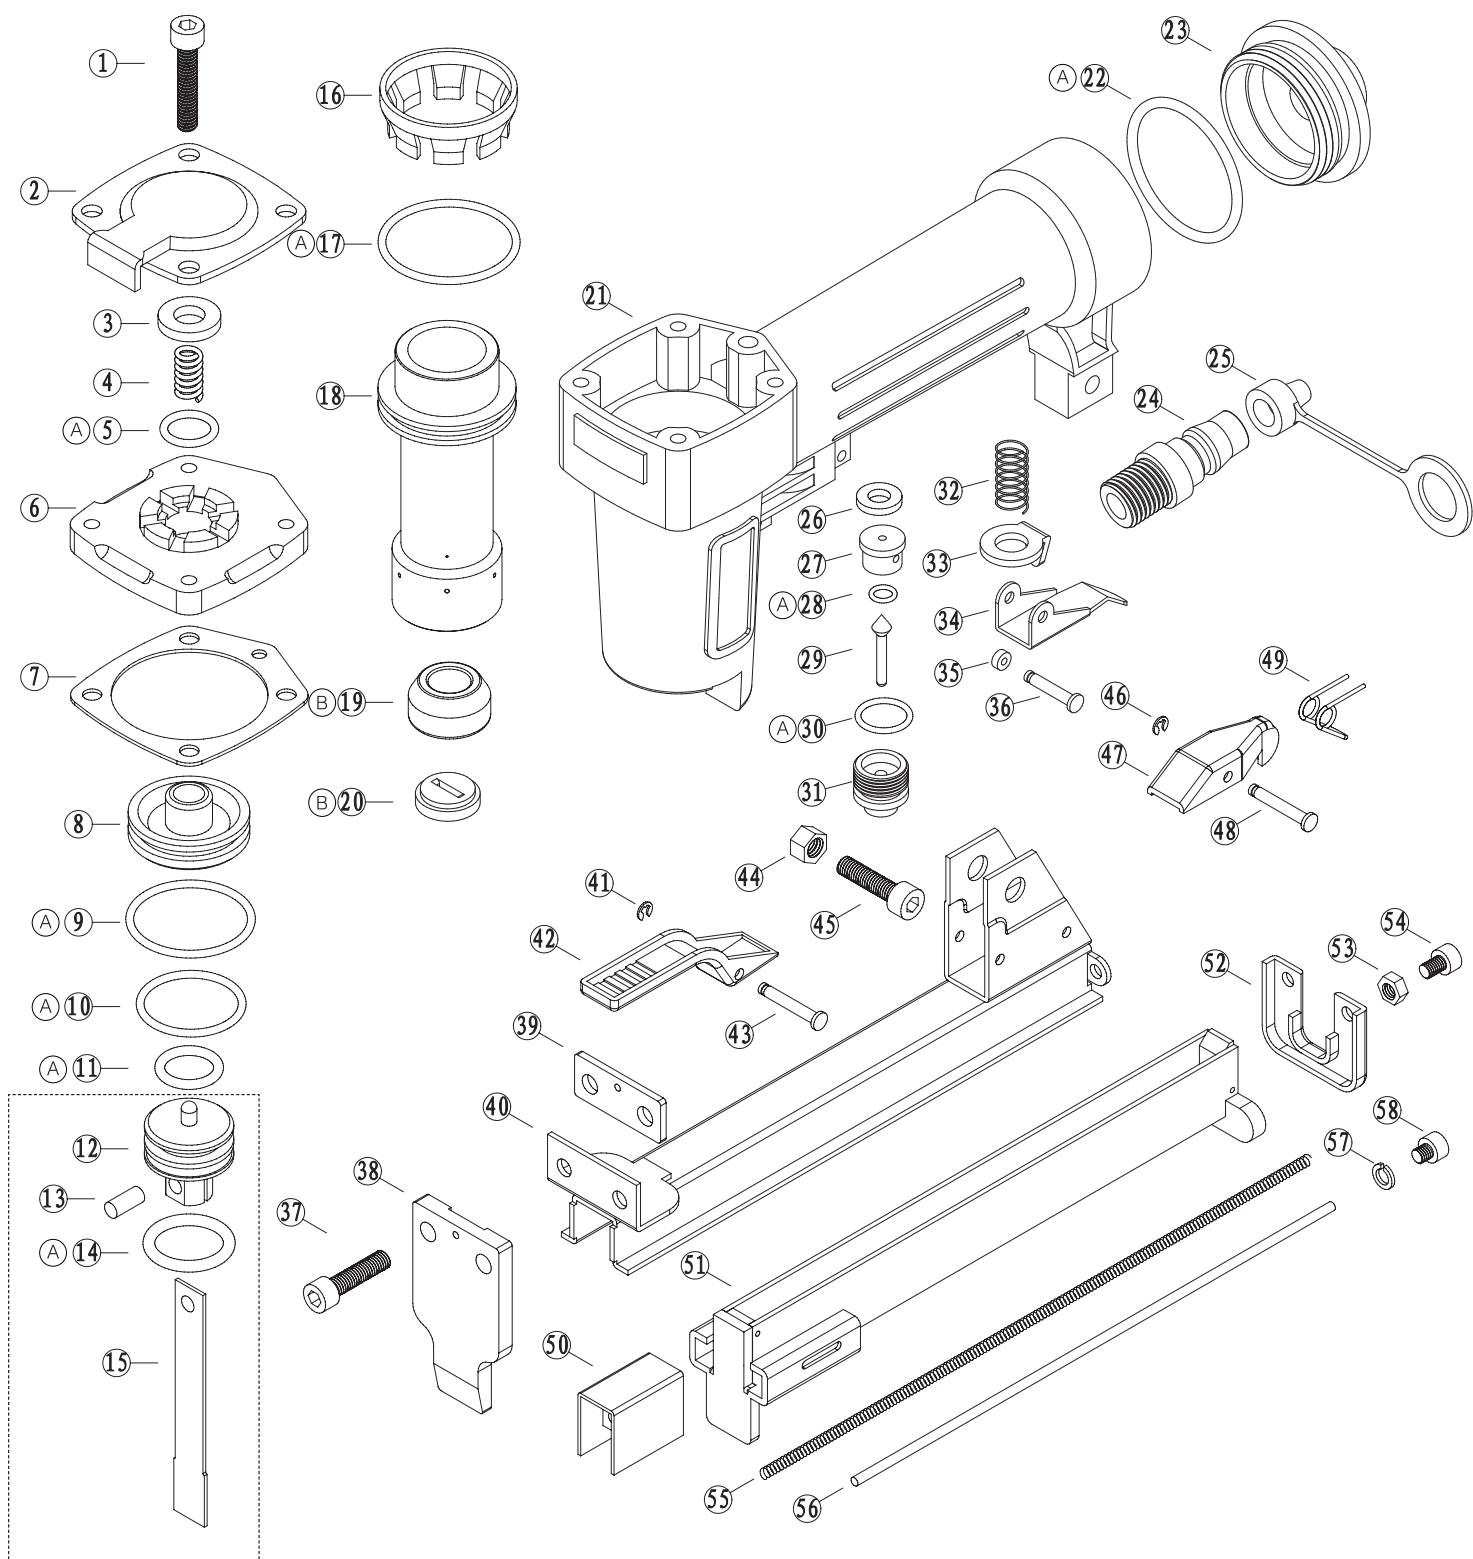

Código	Nº	Detalle recambios	Spare part list	Código	Nº	Detalle recambios	Spare part list
-	1	Tornillo	HEX SOC HD BOLT	-	29	Vástago gatillo	INNER VALVE SEAT
-	2	Deflector	EXHAUST CAP	-	31	Tapa gatillo	TRIGGER VALVE GUIDE
-	3	Junta cabeza	RECTANGLE WASHER	-	32	Muelle gatillo	TRIGGER SPRING
-	4	Muelle de compresión	COMPRESSION SPRING	-	33	Bloqueo gatillo	TRIGGER LOCK
-	6	Tapa cilindro	CYLINDER COVER	-	34	Gatillo	TRIGGER
-	7	Junta cabeza	SEAL GASKET	-	35	Tórica	O-RING
-	8	Válvula	HEAD VALVE PISTON	-	36	Pasador gatillo	TRIGGER PIN
86900080A	5*	KIT A Tóricas	KIT A O-RING	-	37	Tornillo	HEX SOC HD BOLT
	9*			-	38	Morro	COVER PLATE
	10*			-	39	Separador	SPACER
	11*			-	40	Cargador fijo	MAGAZINE CAP STOP
	14*			-	41	Circlip	E-RING
	17*			-	42	Mango pista	LATCH HANDLE
	22*			-	43	Pasador	PIN
	28*			-	44	Tuerca	SCREW
	30*			-	45	Tornillo	HEX SOC HD BOLT
8690008015	12*	CONJUNTO PISTON LENGÜETA Pistón (12) + Pasador (13) + Tórica (14) + Lengüeta (15)	DRIVER UNIT PISTON (12) + PIN (13) + O-RING (14) + DRIVER (15)	-	46	Circlip	E-RING
	13*			-	47	Cierre	LATCH
	14*			-	48	Pasador	PIN
	15*			-	49	Muelle Pista	LATCH SPRING
-	16	Jaula	COLLAR	-	50	Empujador	PUSHER
-	18	Camisa	CILINDER	-	51	Cagador Móvil	MAGAZINE CAP
86900080B	19*	KIT B Amortiguador (19) + Guía Lengüeta(20)	KIT B BUMPER (19) + NOZZLE (20)	-	52	Tope pista	PUSHER STOP
	20*			-	53	Tuerca	SCREW
-	21	Cuerpo	GUN BODY	-	54	Tornillo	HEX SOC HD BOLT
-	23	Tapón Carcasa	END CAP	-	55	Muelle empujador	PUSHER SPRING
-	24	Racor	AIR PLUG	-	56	Guía empujador	PUSHER GUIDE
-	25	Tapón Racor	AIR PLUG SEAT	-	57	Muelle pasador	SPRING PIN
-	26	Arandela de goma	SEAL	-	58	Tornillo	HEX SOC HD BOLT
-	27	Válvula gatillo	TRIGGER VALVE SEAT				

* Solo se suministran los recambios marcados con asterisco.

* Only the items marked with an asterisk are provided.