




Grapadora neumática simG97 | Pneumatic stapler simG97

Explosionado - Exploded view

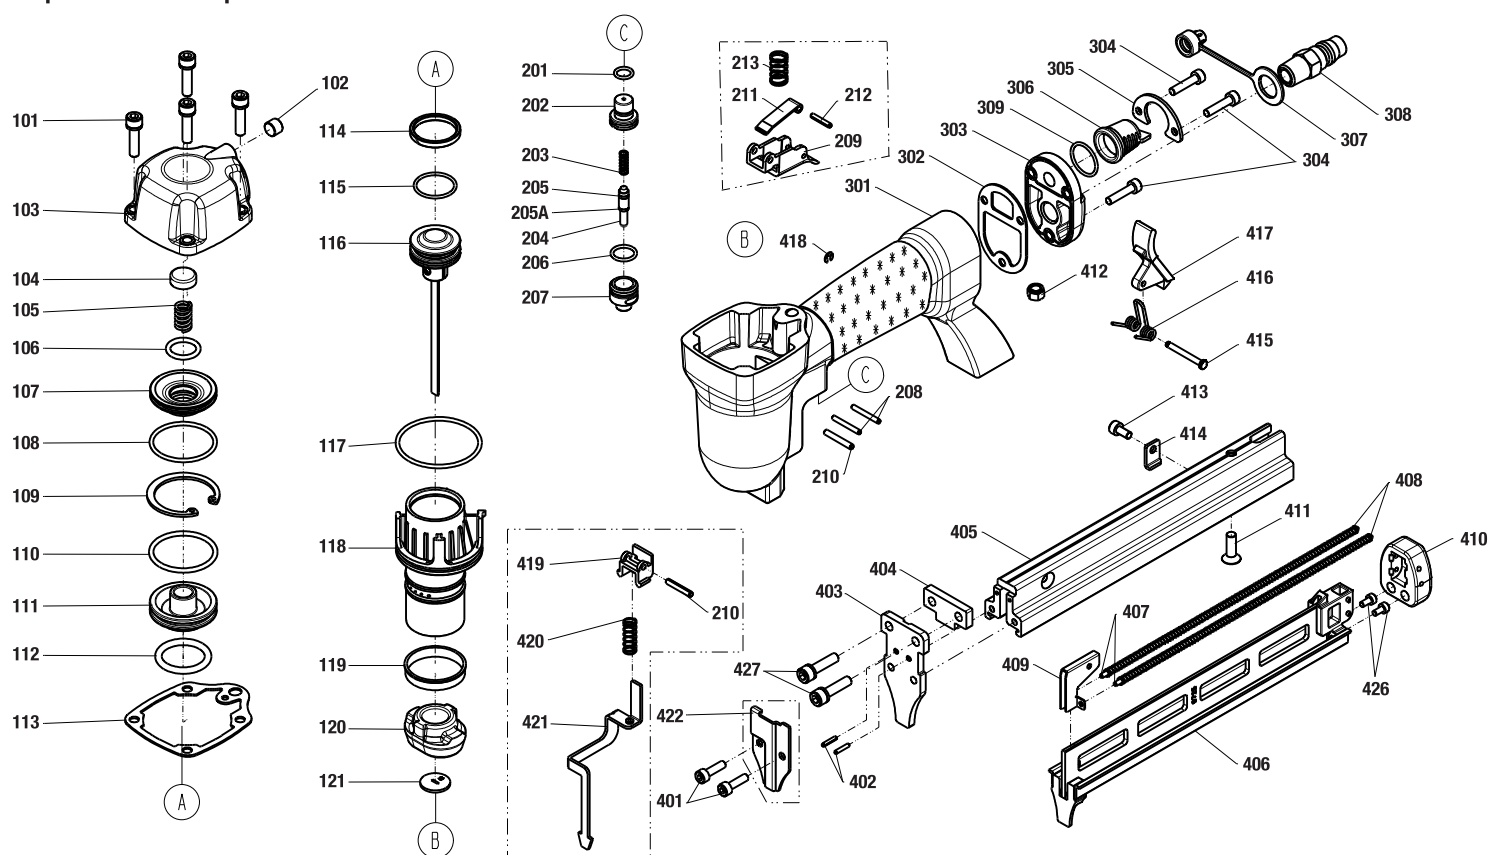

simG97

1205097

Despiece - Spare part list

REF.	Nº.	DESC.
9725101	101	BOLT ASSY
9725102	102	HEX. SOC. HD. SCREW
9725103	103	CAP
9725104	104	SEAL
9725105	105	COMPRESSION SPRING
9725106	106	O - RING
9725107	107	COLLAR
9725108	108	O - RING
9725109	109	RING
9725110	110	O - RING
9725111	111	HD. VALVE PISTON
9725112	112	O - RING
9725113	113	PACKING
9725114	114	PISTON RING
9725115	115	O - RING
9725116	116	DRIVER UNIT
9725117	117	O - RING
9725118	118	CYLINDER
9725119	119	CYLINDER RING
9725120	120	BUMPER
9725121	121	DRIVER GUIDE
9725201	201	O - RING
9725202	202	TRIGGER VALVE HEAD

REF.	Nº.	DESC.
9725203	203	SPRING
9725204	204	PLUNGER
7150209	205	O - RING
9725205A	205A	O - RING
9725206	206	O - RING
9725207	207	PLUNGER CAP
9725208	208	SPRING PIN
9725209	209	TRIGGER
3490403	210	SPRING PIN
9725213	211	SECONDARY TRIGGER
2515440	212	SPRING PIN
645208	213	SPRING
9725301	301	GUN BODY UNIT
9725302	302	GASKET
9725303	303	END CAP
9725304	304	HEX. SOC. HD. BOLT
9725305	305	BRACKET
9725306	306	GUIDE PLATE
130304	307	DUSTY COVER
130305	308	AIR PLUG
9725309	309	O - RING
9725401	401	HEX. SOC. HD. BOLT
9725402	402	SPRING PIN

REF.	Nº.	DESC.
9725403	403	DRIVER GUIDE COVER
9725404	404	GASKET
9725405	405	MAGAZINE B
9725406	406	DRIVER GUIDE UNIT
9725407	407	ROD
9725408	408	PUSHER SPRING
9725409	409	PUSHER
9725410	410	PROTECTING HOOD COVER
9725411	411	COUNTER SUNK SCREW
7150453	412	LOCK NUT
3490409	413	HEX. SOC. HD. BOLT
9725414	414	STOPPER
9725415	415	LATCH PIN
9725416	416	SPRING
9725417	417	LATCH
9725418	418	E - RING
9725419	419	SAFETY GUIDE
9725420	420	SAFETY SPRING
9725421	421	SAFETY
9725422	422	RELIEF PLATE
9725426	426	HEX. SOC. HD. BOLT
9725427	427	BOLT ASSY